


Phone: 519 / 821-0837

800 / 755-0230

Fax: 519 / 821-1936

#87 - 302 COLLEGE AVE. W. • GUELPH, ON N1G 4T6

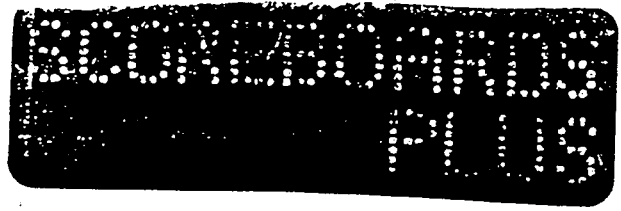

FAIR-PLAY SCOREBOARDS CONTROL OPERATING INSTRUCTIONS

GENERAL :

Before starting, check that the controller is connected correctly :

- Plug the controller in. Also plug the data cable into either "Scoreboard" jack. (NOT "Timer") on the back of the control, then into the appropriate wall jack.
- Turn ON the control. (On/Off switch is on the back)

TO START A NEW GAME :

- Push ">>" (Right arrow button).
- Answer YES to the question "NEW GAME?".

DATA ENTRY :

Make sure Locker switch is off before setting time

CLOCK

1) START / STOP : Push "Time In" rocker switch.

2) CORRECT THE CLOCK :

- Press "Set Clock"
- Press 4 Digits for the correct time, eg. 0523 for 5:23 (5 minutes, 23 seconds).
- Press "Enter"

SCORE

CHANGE SCORE :

- Press "Home Score" or "Visitor Score"
- Press "+1" or "-1"

OR

- Press "Home Score" or "Visitor Score"
- Press appropriate keypad number (eg: 3)
- Press "Enter".

PERIOD

CHANGE PERIOD :

- Press "Period".
- Press "+1" or "-1"

**FOR ANY ASSISTANCE OR CLARIFICATION, PLEASE
CALL SCOREBOARDS PLUS AT 1 800 755-0230.**

Turn Over

1) ENTER A PENALTY :

- Press "Home Penalty" or "Visitor Penalty"
- Press "2:00" or "4:00" or "5:00" or "10:00"
- Press one or two digits for the player's number
- Press "Enter".

2) CLEAR A PENALTY :

- Press "Home Penalty" or "Visitor Penalty"
- Press CLR" (Clear)
- Press one or two digits for the player's number
- Press "Enter"
- Press "Enter" again to clear, OR enter a new time.

NOTE: During a game, if you correct the game clock while penalty times are counting, the control will ask if you also want to correct the penalties. If you respond "YES", you will be prompted for the remaining time for each penalty. Enter the corrected *time* for each player. (4 Digits - eg. 0130 for 1:30, then "enter".)

OTHER :

HORN

Can be sounded any time by pushing the "Horn" button. Horn sounds automatically at 0:00. To turn off/on this function, press "Auto Horn".

The main clock can display three different clock modes: *Game Time, Break Time* or *Over Time*. To alternate between them:

- Press "Set Clock" until the desired clock mode is displayed.
- Press "Enter".

- Press "Home Timeout" or "Visitor Timeout"
- Press "-1" to Start / Stop timeout timer. Horn will sound for one second with 15 seconds left and again at 0:00.

When the scoreboard is not being used for a game, the time of day can be displayed instead :

- Press ">>" (Right Arrow) until "TOD Clock?" is displayed.
- Press "YES".
- Press "Set Clock".
- Press 4 Digits for the correct time, (eg. 0523 for 5:23).
- Press "Enter".

DO YOU KNOW ?

Several functions (eg: length of a period) can be re-set on this controller. If you need this information changed, speak to the facility manager. Only authorised personnel have access to the programming mode on this controller.

REPAIRS TO THE SCOREBOARD OR TO THE ROBBERS AND/OR OTHER VENDING ROBBERIES TO THE FACILITY MANAGER IMMEDIATELY.